


FOAMER


3270FO, 3270FE

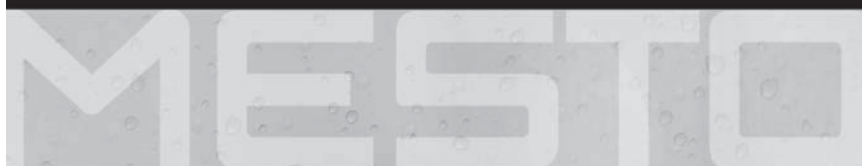



D	A	CH	
Gebrauchsanleitung.....			6
GB	IRL	AUS	USA NZ CDN IND
Instructions for Use			12
F	CH	B	NL CDN
Mode d'emploi			18
FIN			
Käyttöohje.....			24
S			
Brugsanvisning			30
N			
Bruksanvisning			36
DK			
Brugsanvisning			42

MESTO Spritzenfabrik
Ernst Stockburger GmbH
Ludwigsburger Straße 71
D 71691 Freiberg / Neckar
Tel : +49 71 41 27 20
Fax : +49 71 41 27 21 00
E-mail : info@mesto.de
Internet : <http://www.mesto.de>



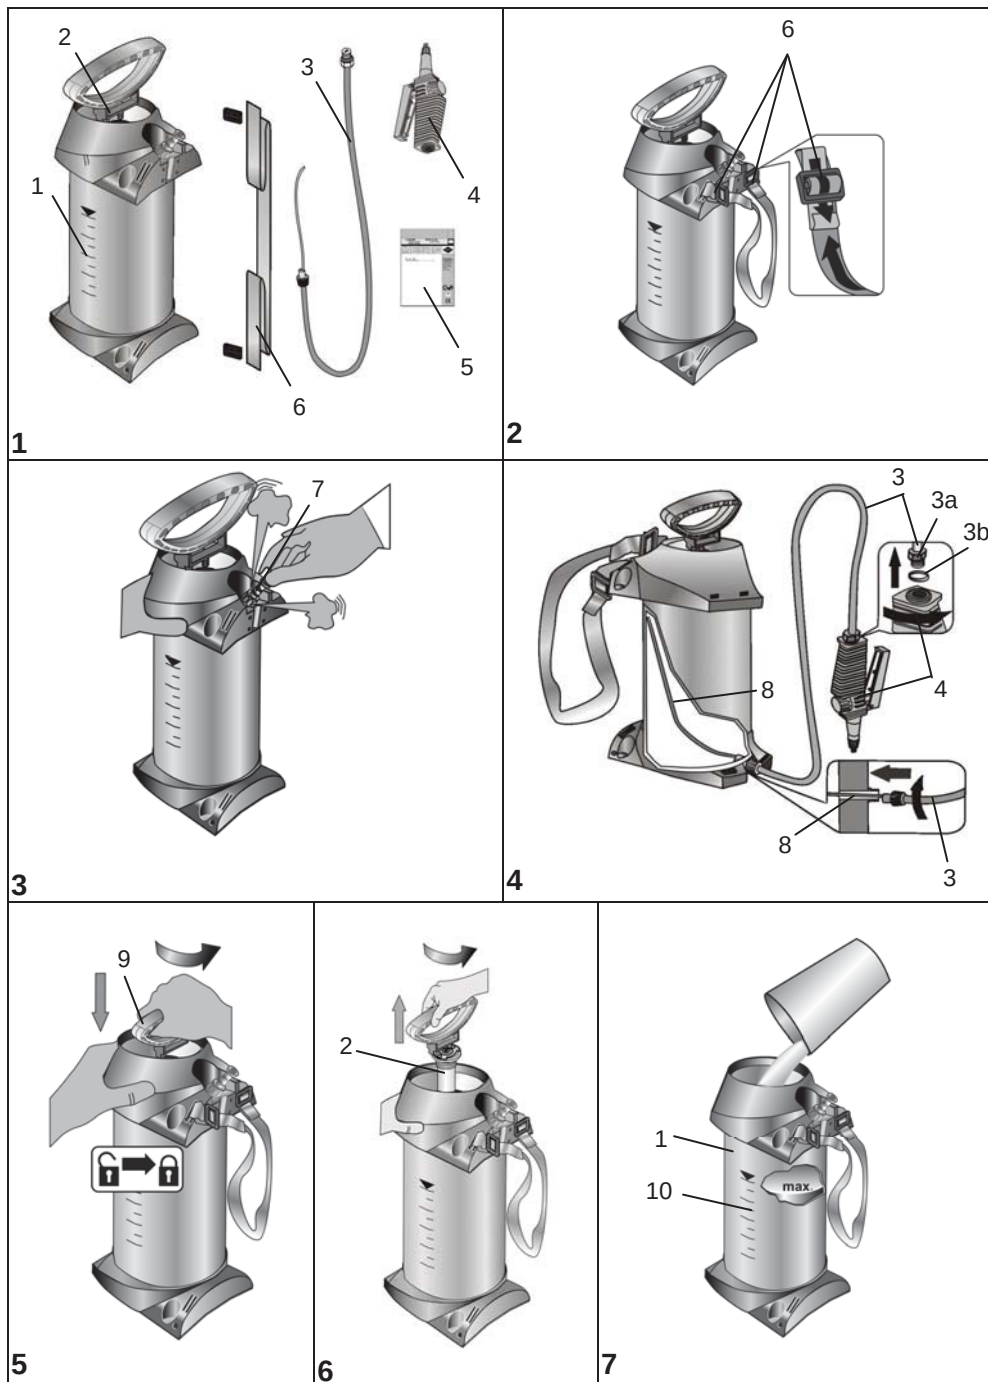

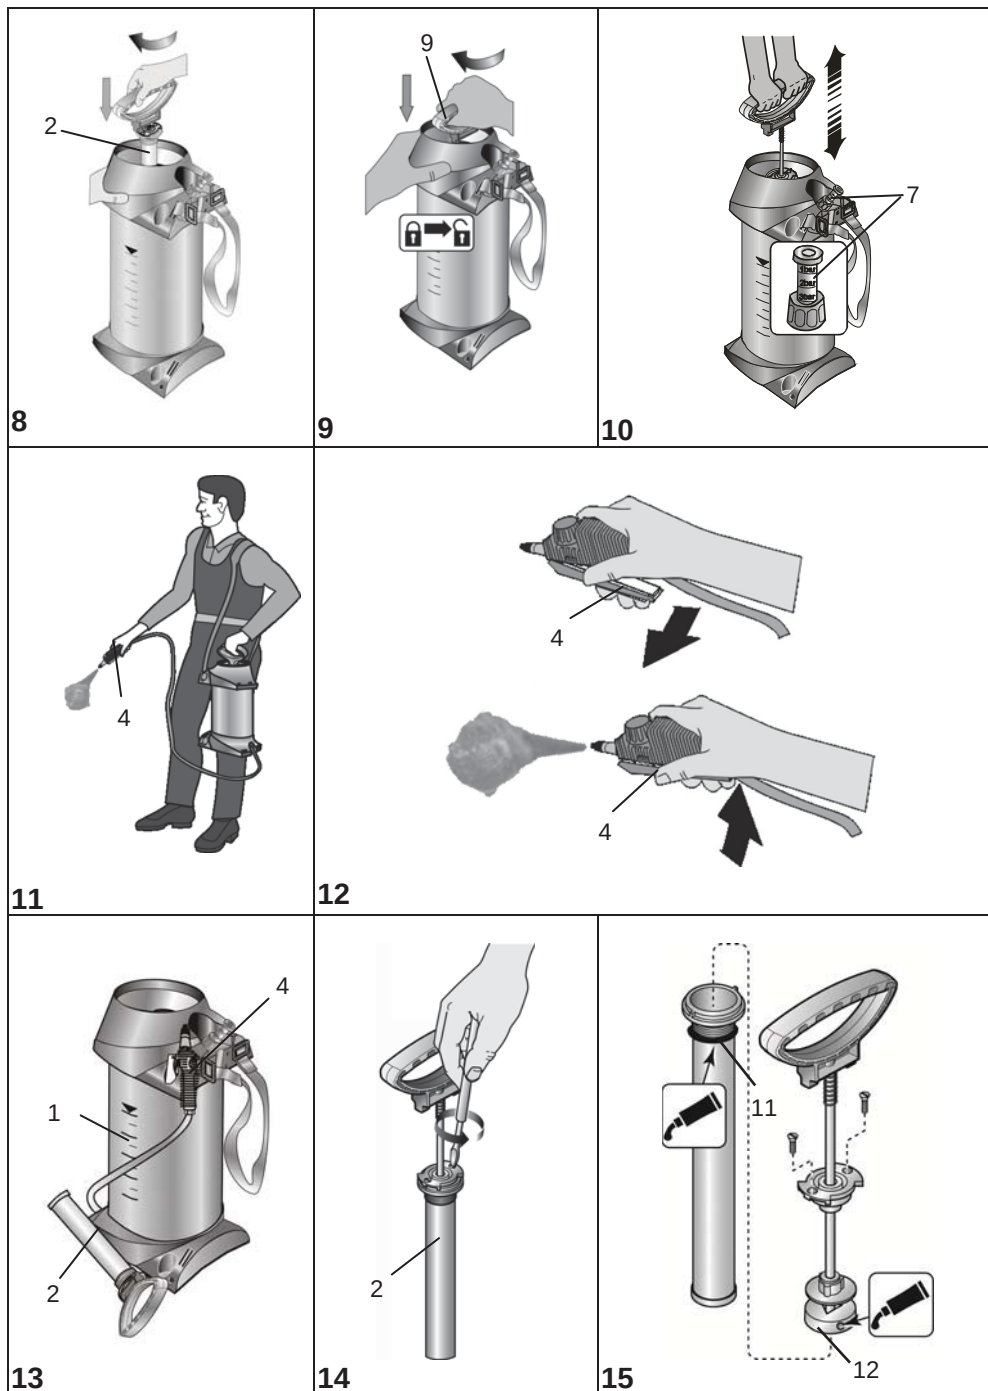

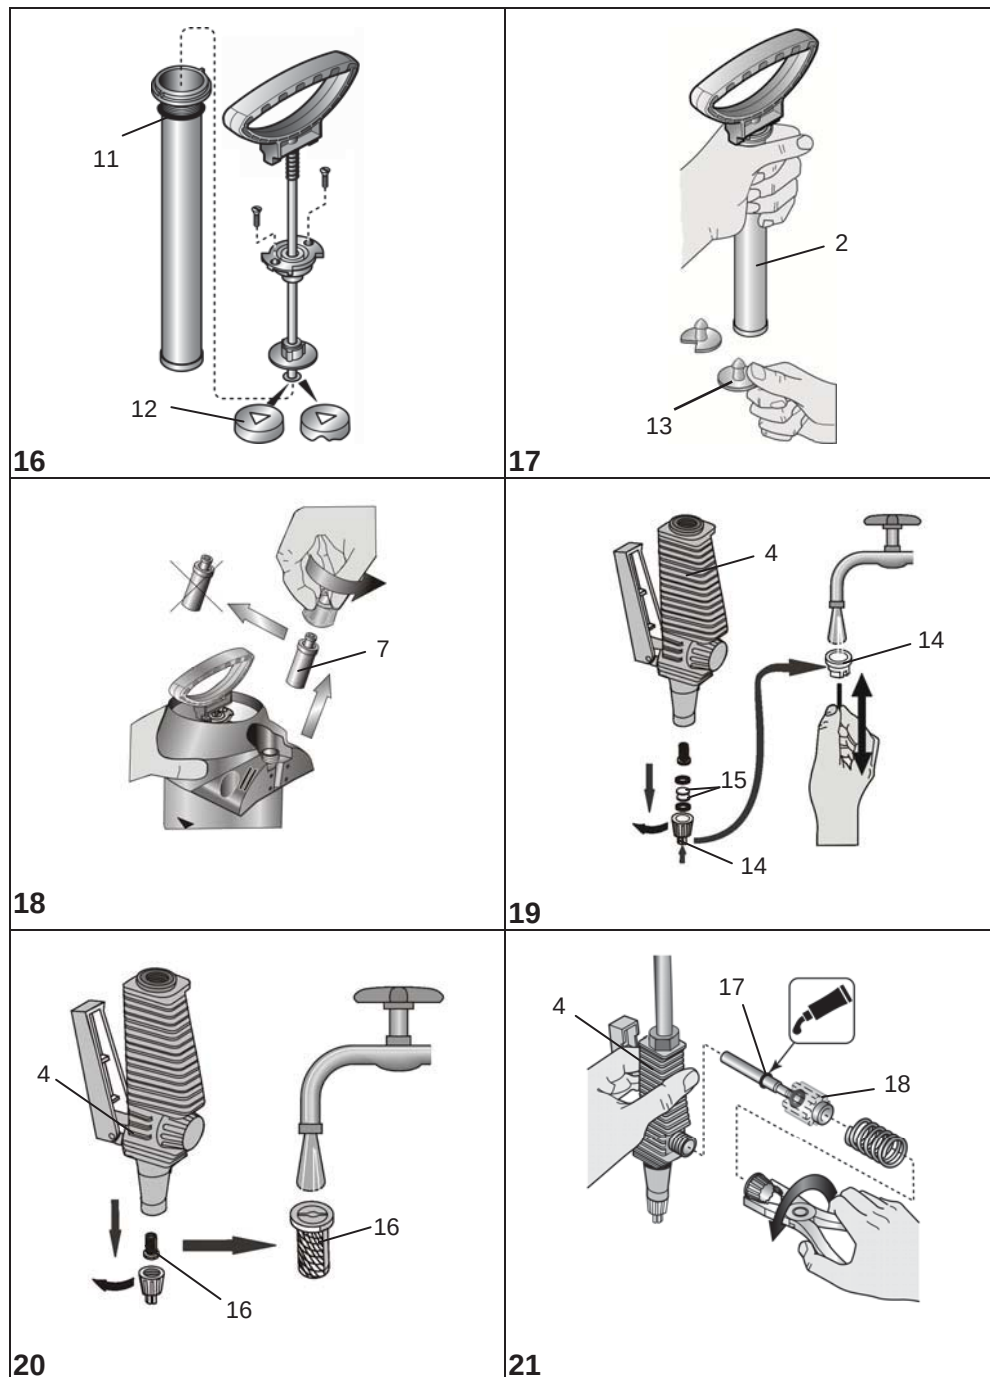

GB	IRL	AUS	USA	NZ	CDN	IND
----	-----	-----	-----	----	-----	-----

Welcome and congratulations

for purchasing your new MESTO foamer. Thank you for the trust you have shown in our brand.

Your satisfaction with MESTO products and services is very important for us.

Please contact us if your expectations are not met.

You will find our address on the title page of these instructions for use.



Make certain to read the instructions for use before using the device!

Keep the instructions for use in a safe place where they can be easily found.

Usage

The FOAMERS 3270FO and 3270FE are intended for the foaming of slightly acidic or alkaline cleaning agents (max. 10% solutions), recommended for use by the substance manufacturer.



Improper use may result in dangerous injuries and environmental damage.

Observe the substance manufacturer's instructions for using the product before each application. You should only use other products if harmful effects on the device and endangerment of people and the environment can be excluded. On request, we will provide you with a list of active ingredients used in the sprayer.

Not suitable for

- Inflammable liquids
- Acids and bases (for exceptions please see above)
- Wetting agents (tensides)
- Viscous or sticky liquids or liquids that form residues (dyes, greases)
- Liquids at temperatures above 40 °C

Under no circumstances should you use

- external pressure sources without a MESTO compressed air valve
- for flaming
- for storing and holding liquids.

Safety



Children and adolescents who have not been properly instructed must not use the device.



Keep the sprayers safe from access to children.



Take precautions to prevent hazardous substances from being misused.



Never spray on people, animals, electrical devices and lines, into the wind, or into bodies of water.



Repairs and modifications to the tank are not permitted.

The effect of the safety valve must not be bypassed or made inoperative.



Avoid ignition sources in the environment if you spray combustible liquids.

GB	IRL	AUS	USA	NZ	CDN	IND
----	-----	-----	-----	----	-----	-----



Do not allow the device to remain under pressure and/or exposed directly to sunlight. Make certain the device is not heated beyond the maximum operating temperature (→ Table 1). Protect the device from frost.



Never blow through the nozzles or valves with your mouth.



Use only MESTO spare parts and accessories.

We cannot assume any liability resulting from the use of third-party parts.



Wear suitable protective equipment when working with hazardous substances.



When pumping, always observe the piston pressure gauge to ensure the maximum spraying pressure is not exceeded (→ Table 1 below).

Before filling, after use and before maintenance work, allow the residual pressure in the tank to dissipate completely (→ Section "After Use", Item 1).

Scope of delivery

Tank [1], pump [2], hose line [3], shut-off valve [4], instructions for use [5], carrying strap [6]. (Fig. 1)

 You will find the illustrations referred to in the text in the front fold-out pages 3 – 5 of these instructions for use.

Technical data

Type of device	FOAMER 3270FO, 3270FE
Max. filling amount	8 l
Recommended filling amount	5 l
Total contents	12.5 l
Max. spraying pressure	3 bar
Max. operating temperature	40 °C
Weight when empty	3.25 kg
Material of tank	Polyethylene
Where device is carried	on the side
Technical residual quantity	< 0.07 l
Max. volume flow	1 l/min
Recoil force	< 5 N
Pressure change from 0 to 3 bar	min. 5000 x

Table 1

Assembly

1. Attach the carrying strap [6] to the tank. (Fig. 2)
2. Insert the riser pipe [8] of the hose line [3] into the tank opening and secure the hose line [3] with the cap nut.

 Make sure that the riser pipe [8] in the tank points upwards in the direction of the pump opening.

3. Screw the shut-off-valve [4] on the hose connection [3a]. (Fig. 4)

 Make sure that the O-ring [3b] is positioned properly in the groove of the shut-off-valve.

GB	IRL	AUS	USA	NZ	CDN	IND
----	-----	-----	-----	----	-----	-----

Checks

Visual inspection: Check that tank [1], pump [2], hose line [3], piston pressure gauge [7], shut-off valve [4] and nozzle [14] are undamaged.

 Pay special attention to the connections between the tank – hose line and hose line – shut-off valve and to the condition of the pump threading.

No leaks: Pump up the empty device to 2 bar. (Fig. 10)

- ▶ The pressure must not decrease more than 0.5 bar within 30 minutes.

Function: Pull up the piston pressure gauge [7]. (Fig. 3)

- ▶ The pressure must dissipate.
Activate the shut-off valve [4]. (Fig. 12)
- ▶ The shut-off valve must open and close.



Have damaged parts or parts that do not work properly repaired immediately by our customer service department or by service partners authorized by us.

Making preparations



Observe the instructions in the section entitled "Safety".

1. Pull up the red button on the piston pressure gauge [7] until all excess pressure is released from the tank (Fig. 3)
2. Press the piston rod with handle [9] down and turn into the lock.
 - ▶ The piston rod with handle is locked. (Fig. 5)
3. Unscrew the pump [2] from the tank. (Fig. 6)
4. Add the liquid to the tank [1]. (Fig. 7)
5. Where appropriate, add cleaning agent.
6. Check the filling level with the scale [10] on the tank. (Fig. 7)
7. Screw the pump [2] into the tank. (Fig. 8)
8. Press the piston rod with handle [9] down and turn out of the lock.
 - ▶ The piston rod with handle is unlocked. (Fig. 9)
9. Generate the desired pressure in the tank (Fig. 10).

 The maximum pressure should not exceed 3 bar (red line on the piston pressure gauge, Fig. 10). If the maximum pressure is exceeded, the safety valve will engage and release the excess pressure.

10. Press the piston rod with handle [9] down and turn into the lock. (Fig. 5)
 - ▶ The piston rod with handle is locked.

Foaming



Observe the instructions in the section entitled "Safety".

Operate the device only while it is vertical or suspended upright and nearly vertical.

Observe the instructions of the substance manufacturer!

1. Hang the device over your shoulder. (Fig. 11)
2. Align the foam nozzle to the area to be sprayed with a distance of 50 / 70 cm.
3. Activate the shut-off valve [4]. (Fig. 12)
 - ▶ Spraying may now begin.
4. Make certain the optimum spraying pressure is set on the piston pressure gauge [7] (Fig. 10).

GB	IRL	AUS	USA	NZ	CDN	IND
----	-----	-----	-----	----	-----	-----

 Pressure and the number of mixing plates mounted in the nozzle can have a profound effect on the foaming result in relation to the foaming agent.

5. Release the lever of the shut-off valve [5]. (Fig. 12)
 - Spraying ends.
6. In case the foam width becomes increasingly smaller, pump some more.

After Usage



Observe the instructions in the section entitled "Safety".

1. Pull up the red button on the piston pressure gauge [7] until all excess pressure is released from the tank. (Fig. 3)
2. Lock the piston rod with handle [9]. (Fig. 5)
3. Unscrew the pump [2] from the tank. (Fig. 6)



Collect and dispose of the residual liquid according to all applicable laws, requirements and regulations. Observe the instructions of the substance manufacturer!

4. Add water to the tank and spray it out for cleaning.
5. Wipe off the device with a moist cloth.
6. For drying and storing the device, keep the tank [1] and pump [2] separate in a dry place protected from sunlight and freezing temperatures (Fig. 13)



Clean the protective equipment and yourself every time after usage.

Care and maintenance



Observe the instructions in the section entitled "Safety".

After using the device 50 times or at least once a year:

- Unscrew the pump [2] from the tank. (Fig. 6)
- Dismantle the pump [2]. (Fig. 14)
- Grease the diaphragm [12]. (Fig. 15)
- Assemble the pump.
- Lock the piston rod with handle [9] and screw the pump [2] into the tank [1].
- Clean the nozzle [14] under running water. If required use a needle. (Fig. 19)
- Remove the filter [16] between nozzle [14] and spray wand [16]. (Fig. 20)
- Clean the filter [16] under running water.
- Grease the O-rings [11] and [17]. (Fig. 15 and/or 21)



Observe the legal requirements of your country for accident prevention and check the device in regular intervals.

If there are no special rules, we recommend you have the device examined externally by a competent professional every 2 years and subject it to an internal inspection every 5 years.

We would be happy to provide you with an inspection schedule in German or English.

GB	IRL	AUS	USA	NZ	CDN	IND
----	-----	-----	-----	----	-----	-----

Faults



Use only MESTO spare parts and accessories (→ *Fig. on page 2*).

Fault	Cause	Remedy
No pressure builds up in the device	The pump is not screwed on tightly.	Screw the pump on tightly.
	O-ring [11] on the pump is faulty. (<i>Fig. 16</i>)	Replace the O-ring.
	Diaphragm [12] is defective. (<i>Fig. 16</i>)	Replace the diaphragm.
Liquid flows out of the pump	Valve disc [13] dirty or defective. (<i>Fig. 17</i>)	Clean or replace the valve disc.
No tank pressure indication on the piston pressure gauge.	Piston pressure gauge [7] is defective. (<i>Fig. 18</i>)	Replace the piston pressure gauge.
Safety valve blows off too early.		
The nozzle does not spray even though pressure is present	Filter [16] (<i>Fig. 20</i>) or / and nozzle [14] or / and mixing plates [15] (<i>Fig. 19</i>) are clogged.	Clean the filter or / and nozzle. Replace mixer plates.
The shut-off valve does not close.	O-ring [17] of the pressure bolt [18] not greased / lubricated. (<i>Fig. 21</i>)	Grease the O-ring of the pressure bolt (<i>dismantle or assemble the pump → section "Care and maintenance"</i>)
Liquid emerges without the lever being activated.	Defective pressure bolt [18] or O-ring [17]. (<i>Fig. 21</i>)	Replace the pressure bolt or O-ring.
No foam formation	Riser pipe [8] separated from hose line.	Connect riser pipe/hose line.
	Position riser pipe [8] not correct. (<i>Fig. 4</i>)	Screw the hose line [3] into the tank again.

Contact address for additional information → *Title page*.

GB	IRL	AUS	USA	NZ	CDN	IND
----	-----	-----	-----	----	-----	-----

Warranty

We guarantee that from the time it is first purchased for a period of the legally valid required warranty period (maximum 3 years) this device will not exhibit any material or processing errors. If defects are discovered during the warranty period, MESTO or the distributor in your country will repair the device without charging for the labor or material or (at the discretion of MESTO) replace the device itself or its defective parts.

If such defects are discovered, please contact us immediately. We require the invoice or cash register receipt for purchase of the device.

The warranty does not include wearing parts (seals, O-rings, diaphragm, etc.) or defects, which have occurred due to improper use or unforeseeable circumstances.

CE Declaration of Conformity

In accordance with EC Directive 2006/42/EC, Annex II, No. 1A.

We,

MESTO Spritzenfabrik Ernst Stockburger GmbH

Ludwigsburger Straße 71

D-71691 Freiberg

declare under our sole responsibility that the Series 3270 foaming devices as supplied from factory number 12A meet all the relevant requirements of Directive 2006/42/EC of the EU. Furthermore the devices correspond to Directive 97/23/EC for Pressure Equipment. Rolf Rehkugler, Ludwigsburger Straße 71, D-71691 Freiberg is authorized to compile the technical documentation.

Freiberg, 15.12.2011



Bernd Stockburger
Managing Director

Original operating instructions

Sydämelliset onnittelut

uuden MESTO-vaahdotuslaitteesi johdosta ja kiitos luottamuksestasi merkkiimme.
Tyytyväisyytesi MESTOn tuotteisiin ja palveluun on meille erittäin tärkeää.
Pyydämme lähettämään palautetta, jos laite ei täytä odotuksiasi.
Osoitteemme on tämän käyttöohjeen etusivulla.



Lue käyttöohje ennen laitteen käyttöä!

Säilytä käyttöohje hyvin tallessa.

Käyttö

Vaahdotuslaitteet FOAMER 3270FO ja 3270FE on tarkoitettu aineenvalmistajan vaahdotuslaitteissa käytettäväksi suosittelemien, kevyesti happo- tai emäspitoisten puhdistusaineiden (kork. 10 %:n liuoksia) vaahdottamiseen.



Asiaton käyttö voi johtaa vaaralliseen loukkaantumiseen ja ympäristövahinkoihin.

Ota aina aineen käytössä huomioon aineen valmistajan antamat ohjeet.

Käytä toisia aineita vain, kun aineen vahingolliset vaikutukset laitteeseen sekä ihmisten ja ympäristön vaarantuminen eivät ole mahdollisia. Pyynnöstä voit saada meiltä sumuttimessa käytettyjen materiaalien luettelon.

Laite ei sovellu seuraaviin tapauksiin

- syttyvät nesteet
- hapot ja lipeät (poikkeus katso edellä)
- verkotusaineet (tensidit)
- sitkeät, liimamaiset tai jäämiä muodostavat nesteet (maalit, rasvat)
- nesteet, joiden lämpötila on yli 40 °C

Laitteessa/laitetta ei saa missään tapauksessa käyttää

- vieraita painelähteitä ilman MESTO-paineilmantäyttöventtiiliä
- liekkikuivaukseen
- nesteiden varastointiin ja säilytykseen.

Turvallisuus



Lapset ja nuoret eivät saa käyttää laitetta ilman asianmukaista käyttöopetusta.



Säilytä sumutinta poissa lasten ulottuvilta.



Estä soveltuvien toimien väärinkäyttö, jos laitteessa käytetään vaarallisia aineita.



Älä koskaan sumuta ihmisiä, eläimiä, sähkölaitteita tai johtoja kohti, vastatuuleen tai vesistöön.



Korjaus- ja muutostyöt säiliössä on kielletty.

Varoventtiiliä ei saa tehdä toimimattomaksi.



Vältä syttymislähteitä ympäristössä, kun sumutat palamiskykyisiä nesteitä.



Älä koskaan jätä laitetta seisomaan paineistettuna ja/tai aurinkoon. Varmista, että laite ei lämpene yli maksimi käyttölämpötilan. (→ *Taulukko 1*). Suojaa laite jäätymiseltä.



Älä koskaan puhalla suuttimia tai venttiileitä puhtaaksi suulla.



Käytä vain MESTOn vara- ja tarvikkeosia.

Emme vastaa vahingoista, jotka johtuvat muiden valmistajien valmistamien osien käytöstä.



Käytä vaarallisia aineita käsitellessäsi sopivia henkilökohtaisia suojavarusteita.



Tarkkaile ilmaa pumpatessasi aina mäntäpainemittaria, jotta maksimi sumutuspaine (→ *Taulukko 1 alla*) ei ylity.

Päästä säiliöön jäänyt paine kokonaan ulos ennen täyttööä, käytön jälkeen ja ennen huoltotöitä (→ *Luku "Käytön jälkeen", kohta 1*).

Toimitussisältö

Säiliö [1], pumppu [2], letku [3], pysäytysventtiili [4], käyttöohje [5], kantohihna [6]. (kuva 1)

Tekstissä mainitut kuvat löytyvät tämän käyttöohjeen aukitaitettavilta etusivuilta 3 – 5.

Tekniset tiedot

Laitetyyppi	FOAMER 3270FO, 3270FE
Maks. täyttömäärä	8 l
Suositeltu täyttömäärä	5 l
Kokonais-tilavuus	12,5 l
Maks. sumutuspaine	3 bar
Maks. käyttölämpötila	40 °C
Tyhjäpaino	3,25 kg
Säiliön materiaali	Polyeteeni
Kantotapa	Sivulla
Tekninen jäämäärä	< 0,07 l
Maks. tilavuusvirta	1 l/min
Takaiskuvoima	< 5 N
Paineenvaihto 0 - 3 bar	min. 5000 x

Taulukko 1

Kokoaminen

1. Kiinnitä kantohihna [6] säiliöön. (kuva 2)

2. Vie letkun [3] nousuputki [8] säiliön aukkoon ja varmista letku [3] hattumutterilla.

Varmista, että nousuputki [8] osoittaa säiliössä ylöspäin pumpun aukon suuntaan.

3. Kierrä sulkuventtiili [4] letkunliittimeen [3a]. (kuva 4)

Varmista, että o-rengas [3b] asettuu hyvin sulkuventtiiliin uraan.

Tarkastaminen

Silmämääräinen tarkastus: Ovatko säiliö [1], pumppu [2], letku [3], mäntäpainemittari [7], pysäytysventtiili [4] ja suutin [14] vaurioitumattomia?

 Kiinnitä huomiota erityisesti säiliön ja letkun sekä letkun ja pysäytysventtiilin välisiin liitoksiin sekä pumpun kierteen kuntoon.

Tiiviys: Pumppaa tyhjään laitteeseen 2 baarin paine. (kuva 10)
 ► Paine ei saa laskea 30 min kuluessa yli 0,5 bar.

Toiminto: Vedä mäntäpainemittari [7] ylös. (kuva 3)

- Paineen tulee poistua.
- Käytä pysäytysventtiiliä [4]. (kuva 12)
- Pysäytysventtiiliin tulee aueta ja sulkeutua.



Anna vaurioituneet tai toimimattomat osat heti huoltopalvelumme tai valtuuttamamme huoltoliikkeen vaihdettaviksi.

Valmistelut



Ota huomioon luvussa "Turvallisuus" annetut ohjeet.

1. Vedä mäntäpainemittarin [7] punaisesta nupista niin kauan, kunnes säiliö on paineeton. (kuva 3)
2. Paina kahvallinen männänvarsi [9] alas ja kierrä se lukitukseen.
 ► Kahvallinen männänvarsi on lukittu. (kuva 5)
3. Kierrä pumppu [2] irti säiliöstä. (kuva 6)
4. Täytä nestettä säiliöön [1]. (kuva 7)
5. Sekoita tarvittaessa puhdistusaine sekaan.
6. Tarkista täyttökorkeus säiliön asteikosta [10]. (kuva 7)
7. Kierrä pumppu [2] säiliöön. (kuva 8)
8. Paina kahvallinen männänvarsi [9] alas ja kierrä se lukituksesta.
 ► Kahvallinen männänvarsi on vapautettu lukituksesta. (kuva 9)
9. Tuota haluamasi paine säiliössä (kuva 10).

 Maksimipaineen ei tulisi ylittää 3 bar (punainen viiva mäntäpainemittarissa, kuva 10). Jos maksimipaine ylittyy, varoventtiili reagoi ja päästää ylipaineen pois.

10. Paina kahvallinen männänvarsi [9] alas ja kierrä se lukitukseen. (kuva 5)
 ► Kahvallinen männänvarsi on lukittu.

Vaahdottaminen



Ota huomioon luvussa "Turvallisuus" annetut ohjeet.

Käytä laitetta vain pystyssä tai hyvin pystyyn ripustettuna.

Noudata aineen valmistajan ohjeita!

1. Ripusta laite olalle. (kuva 11)
 2. Kohdista vaahtosuutin suihkutettavalle pinnalle 50/70 cm:n etäisyydellä.
 3. Käytä pysäytysventtiiliä [4]. (kuva 12)
 ► Sumutus alkaa.
 4. Kiinnitä huomiota optimaaliseen sumutuspaineeseen mäntäpainemittarissa [7] (kuva 10).
-  Vaahdotustulokseen voidaan vaikuttaa huomattavasti paineella ja suuttimeen asennettujen sekoituslevyjen avulla vaahtoaineesta riippuen.

5. Vapauta pysäytysventtiili [5] vipu. (kuva 12)
 - Sumutus päättyy.
6. Jos vaahdon leveys pienenee huomattavasti, pumpppaa lisää.

Käytön jälkeen



Ota huomioon luvussa "Turvallisuus" annetut ohjeet.

1. Vedä mäntäpainemittarin [7] punaisesta nupista niin kauan, kunnes säiliö on paineeton. (kuva 3)
2. Lukitse männänvarsi kahvan kanssa [9]. (kuva 5)
3. Kierrä pumpppu [2] irti säiliöstä. (kuva 6)



Kerää ja hävitä jäännösmäärä voimassa olevien lakien, määräysten ja sääntöjen mukaan. Noudata aineen valmistajan ohjeita!

4. Täytä vettä säiliöön ja sumuta se ulos puhdistusta varten.
5. Pyyhi laite puhtaaksi kostealla liinalla.
6. Säilytä säiliötä [1] ja pumpppua [2] erillään kuivumista ja varastointia varten kuivassa, auringonpaisteelta suojatussa ja pakkasettomassa ympäristössä. (kuva 13)



Puhdista käytön jälkeen henkilökohtaiset suojavarusteet ja itsesi.

Huolto ja hoito



Ota huomioon luvussa "Turvallisuus" annetut ohjeet.

50 käyttökerran jälkeen, vähintään kerran vuodessa:

- Kierrä pumpppu [2] irti säiliöstä. (kuva 6)
- Pura pumpppu [2] osiin. (kuva 14)
- Rasvaa mansetti [12]. (kuva 15)
- Kokoa pumpppu.
- Lukitse männänvarsi kahvalla [9] ja kierrä pumpppu [2] säiliöön [1].
- Puhdista suutin [14] juoksevan veden alla, tarvittaessa neulaa käyttäen. (kuva 19)
- Poista suodatin [16] suuttimen [14] ja ruiskutusputken [16] välistä. (kuva 20)
- Puhdista suodatin [16] juoksevan veden alla.
- Rasvaa O-renkaat [11] ja [17]. (kuva 15 tai 21)



Ota huomioon maasi lakisääteiset tapaturmantorjuntamääräykset ja tarkasta laite säännöllisesti.

Jos mitään erityisiä sääntöjä ei ole, suosittelemme, että laite annetaan asiantuntevan henkilön tarkastettavaksi ulkoisesti 2 vuoden välein ja sisäisesti 5 vuoden välein.

Annamme mielellämme käyttöösi tarkastussuunnitelman saksan- tai englanninkielellä.

Häiriöt



Käytä vain MESTOn vara- ja tarvikkeosia (→ kuva sivulla 2).

Häiriö	Syy	Toimenpide
Laitteessa ei muodostu painetta.	Pumppu ei ole kierretty lujasti kiinni.	Kierrä pumppu lujasti kiinni.
	O-rengas [11] pumpussa viallinen. (kuva 16)	Vaihda O-rengas.
	Mansetti [12] viallinen. (kuva 16)	Vaihda mansetti.
Pumpusta vuotaa nestettä.	Venttiilin aluslevy [13] likainen tai viallinen. (kuva 17)	Puhdista tai vaihda venttiilin aluslevy.
Mäntäpainemittarissa ei näy säiliöpainetta.	Mäntäpainemittari [7] viallinen. (kuva 18)	Vaihda mäntäpainemittari.
Varoventtiili puhalttaa liian aikaisin.		
Suutin ei sumuta, painetta on kuitenkin.	Suodatin [16] (kuva 20) tai / ja suutin [14] tai / ja sekoituslevyt [15] (kuva 19) tukossa.	Puhdista suodatin tai / ja suutin. Vaihda sekoituslevyt.
Pysäytysventtiili ei sulkeudu.	Painetapin [18] O-rengasta [17] ei ole rasvattu / voideltu. (kuva 21)	Rasvaa painetapin O-rengas (pura pumppu osiin ja kokoa yhteen → Luku "Huolto ja hoito")
Nestettä vuotaa, vaikka vipua ei käytetä.		Vaihda painetappi tai O-rengas.
Vaahtoa ei synny	Nousuputki [8] irrotettu letkusta.	Liitä nousuputki/letku.
	Nousuputken [8] sijainti ei ole kunnossa. (kuva 4)	Ruuvaa letku [3] uudelleen säiliöön.

Yhteystiedot lisätietoja varten → Etusivu.

Takuu

Takaamme, että tässä laitteessa ei ole materiaali- eikä työstövikoja ensihankinnan ajankohdasta alkavan, voimassa olevan lakisääteisen takuusuoritusvelvollisuuden (maks. 3 vuotta) aikana. Mikäli takuuajan kuluessa ilmenee puutteita, MESTO tai sen edustaja maassasi korjaa laitteen (MESTOn harkinnan mukaan) itse tai vaihtaa vialliset osat laskuttamatta työ- ja materiaalikustannuksia.

Pyydämme tällaisessa tapauksessa ottamaan meihin välittömästi yhteyden. Tarvitsemme laskun tai kassakuitin laitteen ostosta.

Takuun piiriin eivät kuulu kuluvat osat (tiivisteet, O-renkaat, mansetti jne.) eivätkä viat, jotka johtuvat asiattomasta käytöstä tai ylivoimaisesta esteestä.

CE-vaatimustenmukaisuusvakuutus

EY-konedirektiivin 2006/42/EY, liitteen II, nro 1A mukaisesti.

Me,

MESTO Spritzenfabrik Ernst Stockburger GmbH

Ludwigsburger Straße 71

D-71691 Freiberg

vakuutamme ainoana vastuullisena, että rakennesarjan 3270 vaahdotuslaitteet, valmistusnumerosta 12A lähtien, vastaavat toimitettuna versiona kaikkia direktiivin 2006/42/EY voimassa olevia määräyksiä. Lisäksi laitteet vastaavat painelaitedirektiiviä 97/23/EY. Rolf Rehkugler, Ludwigsburger Str. 71; D-71691 Freiberg, on valtuutettu kokoamaan tekniset asiakirjat.

Freiberg, 15.12.2011



Bernd Stockburger
Toimitusjohtaja

Alkuperäinen käyttöohje